

Contents

- 1 pair Acuter binoculars
- 1 eyecup cover
- 2 protective lens caps

- 1 Instruction Guide
- 1 Night Sky Pocket Guide
- 1 Birds of North America Pocket Guide

Binoculars must be returned to a Coquitlam Public Library branch Help Desk.



City Centre Branch | 1169 Pinetree Way Poirier Branch | 575 Poirier Street Library Link | coqlibrary.ca

coqlibrary.ca 604-554-7323

Using the Acuter 10x42 Binoculars



Set up the binoculars

- 1. Remove the interconnected lens covers. You will look through the binoculars from this end.
- 2. Remove the two plastic lens caps by gently squeezing the latches on their outer edges.
- 3. Hold the binoculars up to your eyes to adjust the barrels. Firmly push the barrels closer together or pull them further apart until you see a single circular field of view.

Focus on an object

- 1. Set the right-eye focus to 0 by matching the white dot on the underside of the dial to the 0 setting.
- 2. Cover the front right lens with your hand.
- 3. With both eyes open, use the left lens to locate an object.
- 4. Rotate the focusing wheel at the centre of your binoculars until the object is in focus.
- 5. Cover the front of the left lens with your hand.
- 6. With both eyes open, use the right lens to locate the same object.
- Rotate the right-eye focus until the object is in focus.
- 8. The image should now be in focus in both lenses.
- 9. When the binoculars are not in use, replace lens and eyecup covers and return the binoculars to the case.

Clean the binoculars

- Body: Wipe with a damp cloth or disinfectant wipe.
- Lenses: Wipe with a microfibre cloth or lens tissue ONLY. Please DO NOT use cleaning solution as it will strip the coating on the lenses.

Caution

- Never look at the sun with binoculars or with the naked eye. Permanent eye damage will result.
- Do not submerge binoculars in water.