

# Vehicle Diagnostic Scanner

at Coquitlam Public Library

## Getting Started

For detailed instructions, refer to the AD310 User's Manual included in this kit, or view the online user's manual at [coqlibrary.ca/vehicle-diagnostic-scanner](http://coqlibrary.ca/vehicle-diagnostic-scanner).

1. Ensure your vehicle is shut off and in a safe environment.
2. Locate the DLC (Data Link Connector or Diagnostic Link Connector) on your vehicle.
  - a. The DLC is usually located within 12 inches of the instrument panel, under or around the driver's side.
  - b. If you can't find the DLC, refer to the vehicle's service manual.
3. Plug the Vehicle Diagnostic Scanner into the DLC.
4. Turn on the ignition.
  - Turn the key to ON position only; do not start the engine.
5. Press ENTER to enter the **Main Menu**.
6. Use the UP/DOWN scroll button to select **Diagnostics** from the menu.
7. Press ENTER to confirm.
8. Use the UP/DOWN scroll button to select **Read Codes** from the Diagnostic Menu and press ENTER.
9. Use the UP/DOWN scroll button to select **Stored Codes** or **Pending Codes** and press ENTER.
10. View the trouble codes and their definitions.
11. To clear or erase the trouble codes, refer to the AD310 User's Manual.



# Vehicle Diagnostic Scanner

at Coquitlam Public Library

## Getting Started

For detailed instructions, refer to the AD310 User's Manual included in this kit, or view the online user's manual at [coqlibrary.ca/vehicle-diagnostic-scanner](http://coqlibrary.ca/vehicle-diagnostic-scanner).

1. Ensure your vehicle is shut off and in a safe environment.
2. Locate the DLC (Data Link Connector or Diagnostic Link Connector) on your vehicle.
  - a. The DLC is usually located within 12 inches of the instrument panel, under or around the driver's side.
  - b. If you can't find the DLC, refer to the vehicle's service manual.
3. Plug the Vehicle Diagnostic Scanner into the DLC.
4. Turn on the ignition.
  - Turn the key to ON position only; do not start the engine.
5. Press ENTER to enter the **Main Menu**.
6. Use the UP/DOWN scroll button to select **Diagnostics** from the menu.
7. Press ENTER to confirm.
8. Use the UP/DOWN scroll button to select **Read Codes** from the Diagnostic Menu and press ENTER.
9. Use the UP/DOWN scroll button to select **Stored Codes** or **Pending Codes** and press ENTER.
10. View the trouble codes and their definitions.
11. To clear or erase the trouble codes, refer to the AD310 User's Manual.

